


Connecting Sockets for burner controls

The **socket burner controls** ensure reliable operation and a high level of robustness while offering ease of connection.

Description	Code	Series
Socket A B	18210130	EMO types GF2, NA2, FV1, G22 series 02, 03 03N, 04, G22/P, G22/E, G22/C,
		EMG types SR3,VE3,VE3.2, M300, AT5, AT5/TR, SD2/TR, BV3, GV2, AT5, BA2, AT5/TR, MF2.4
Socket D E	18210088	R. F. type RE3 EMG types MF2, SR3/TR, SR3/CM...
Socket MG	18210113	Eurobox types CM381
Socket MOG	18210121	Eurogas types VM44G and VM45G / Eurooil types VM44O and VM45O Eurogas types VM41-VM43 / Euro-Oil series 7-9-10, Digital Euro-Oil
Socket N	18210095	EMO types GF2, NA2, FV1, G22 series 02, 03 03N, 04, G22/P, G22/E, G22/C,
		EMG types SR3,VE3,VE3.2, M300, AT5, AT5/TR, SD2/TR, BV3, GV2, AT5, BA2, AT5/TR, MF2.4
Socket NE	18210114	R. F. type RE3 EMG types MF2, SR3/TR, SR3/CM...
Socket NG	18210094	Eurogas types VM42 Eurobox types DSM11, DSM11P, DS11, DS11P, CM191N, CE191, CM391N, CE391, SM191N, SE191, SM192N, SE192, SM152, SE152, MM191N, ME191, MM192N, ME192, SM592N, SM592N/S, SE592, SE592/S
Socket OG	18210116	Eurobox types MT...
Socket P	18210096	Eurobox types CM191N, CE191, CM391N, CE391, SM191N, SE191, SM192N, SE192, SM152, SE152, MM191N, ME191, MM192N, ME192, SM592N,
Socket NBT	18210124	Eurobox types BT...G / Eurooil types BT...O
Socket MPI	18210120	Eurogas types MPI...

The socket for burner controls are equipped with core hitches to ensure IP40 protection degree. The following figure show core hitches code 18210200 (fig. a) and code 80536550 (fig. b):

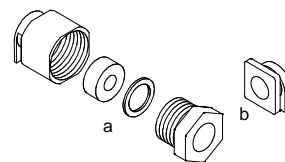

For further information see data sheets of the devices

BRAHMA S.p.A.
Via del Pontiere, 31
37045 Legnago (VR) - Italy
Tel. +39 0442 635211 – Fax +39 0442
25683

<http://www.brahma.it>
E-mail: brahma@brahma.it